



Don't just purge... *Ultra Purge!*^(TM)

Technical Data Sheet

Ultra Purge PC

Ready-to-use chemical purging compound

Please read carefully TDS-SDS before using Ultra Purge

Working temp range	Works with	Applications	Designed for
from 220°C / 428°F to 340°C / 644°F	When switching from any resin to PC	Injection Molding Hot Runners Extrusion Sheet Extrusion	Color Changes Material Changes Carbon Build Up

Produced By

MOULDS PLUS
INTERNATIONAL


 ULTRA
 PURGE

Ultra Purge PC

Ready-to-use chemical purging compound

Working temp range

from 220°C / 428°F

to 340°C / 644°F

When switching from any resin to PC

Please read carefully TDS-SDS before using Ultra Purge

Injection molding – SCREW-BARREL – Material change/Mold change

This document is a general description on how to use Ultra Purge. Request your customized instructions by contacting your nearest sales office or local distributor.

- **Move the injection unit to the back position and empty the barrel.**
- Manually remove all possible contaminants in the hopper/mixer/filters...
- Add Ultra Purge (1 barrel capacity).

Do not load Ultra Purge PC at a temperature lower than 220°C/428°F.

- Make shots at production shot size until the barrel is completely empty from Ultra Purge.
- If you have to perform a mold change, set the temperature of the barrel to “Maintenance/Idle” at a temp of 120°C/248°F and perform the mold change with barrel empty.
- When ready to start-up, set the barrel temperature to production settings and add 1 barrel capacity of Ultra Purge.
- When the Ultra Purge is ejected from the nozzle, allow for a 3 minutes soak time for best performance.
- Add the next production resin directly after Ultra Purge and make injections until Ultra Purge is completely displaced from the machine.
- Make 4-5 injections with the next resin to complete the purge and begin normal production.
- If contamination persists repeat steps.

Special notes:

TDS-Ultra_Purge_PC_rev1_ENG

- Do not load Ultra Purge through heated feeding line - Ultra Purge starts to melt at 80 C / 176 F.
- Do not allow a longer soak time than what suggested.
- Do not use more than recommended quantities of Ultra Purge per cleaning.
- Do not increase temperatures if dealing with thermo sensitive resins or additives.
- Do not use Ultra Purge outside its working temperature range.


 ULTRA
 PURGE

Ultra Purge PC

Ready-to-use chemical purging compound

Working temp range

from 220°C / 428°F

to 340°C / 644°F

When switching from any resin to PC

Please read carefully TDS-SDS before using Ultra Purge

Injection molding – SCREW-BARREL – Color change

This document is a general description on how to use Ultra Purge. Request your customized instructions by contacting your nearest sales office or local distributor.

- **Move the injection unit to the back position and empty the barrel.**
- Manually remove all possible contamination sources in the hopper/mixer/filters...
- Add Ultra Purge (1 barrel capacity).
- Make shots until you see Ultra Purge being ejected through the nozzle.
- Allow for a 3 minutes soak time for best performance.
- Add the next production resin/color directly after Ultra Purge and make injections until Ultra Purge is completely displaced from the machine.
- Make 4-5 injections with the next resin to complete the purge and begin normal production.
- If contamination persists repeat steps.

NOTES - The same procedure can be applied also for START-UP. If during a color change is necessary to change the mold, follow the procedure "Injection molding - SCREW-BARREL - Material change/Mold change".

Special notes:

TDS-Ultra_Purge_PC_rev1_ENG

- Do not load Ultra Purge through heated feeding line - Ultra Purge starts to melt at 80 C / 176 F.
- Do not allow a longer soak time than what suggested.
- Do not use more than recommended quantities of Ultra Purge per cleaning.
- Do not increase temperatures if dealing with thermo sensitive resins or additives.
- Do not use Ultra Purge outside its working temperature range.


 ULTRA
 PURGE

Ultra Purge PC

Ready-to-use chemical purging compound

Working temp range

from 220°C / 428°F

to 340°C / 644°F

When switching from any resin to PC

Please read carefully TDS-SDS before using Ultra Purge

Injection molding – Hot runners – MOLD OPEN

This document is a general description on how to use Ultra Purge. Request your customized instructions by contacting your nearest sales office or local distributor.

- Purge the injection unit using the "Injection Molding - SCREW-BARREL - Color change" procedures.
- Protect the ejection side of the mold with cardboard or a metal cover.
- Add half barrel of Ultra Purge directly after the next production resin and purge through the hot runners with the mold open.
- Once Ultra Purge is been used up, load the next production resin and make shots until all remnants of Ultra Purge have been displaced from the machine.
- Make 4-5 injections of the next resin and set all parameters to production settings.
- Begin normal production.

Special notes:

TDS-Ultra_Purge_PC_rev1_ENG

- Do not load Ultra Purge through heated feeding line - Ultra Purge starts to melt at 80 C / 176 F.
- Do not allow a longer soak time than what suggested.
- Do not use more than recommended quantities of Ultra Purge per cleaning.
- Do not increase temperatures if dealing with thermo sensitive resins or additives.
- Do not use Ultra Purge outside its working temperature range.


 ULTRA
 PURGE

Ultra Purge PC

Ready-to-use chemical purging compound

Working temp range

from 220°C / 428°F

to 340°C / 644°F

When switching from any resin to PC

Please read carefully TDS-SDS before using Ultra Purge

Extrusion

This document is a general description on how to use Ultra Purge. Request your customized instructions by contacting your nearest sales office or local distributor.

- **Empty the barrel before start purging.**
- Add Ultra Purge (approximately 1.5 times the extruder barrel capacity).
- Extrude at low speed until Ultra Purge being ejected from the machine.
- If extruder pressure builds up after loading Ultra Purge, remove the screen pack.
- Add the next production resin directly after Ultra Purge.

(In case of material change with different working temperature, set the temperatures to the next production resin)

- Extrude the next production resin at higher speed to flush out all remnants of Ultra Purge. If possible, replace the screen pack.
- If contamination persists repeat steps.

Special notes:

TDS-Ultra_Purge_PC_rev1_ENG

- Do not load Ultra Purge through heated feeding line - Ultra Purge starts to melt at 80 C / 176 F.
- Do not allow a longer soak time than what suggested.
- Do not use more than recommended quantities of Ultra Purge per cleaning.
- Do not increase temperatures if dealing with thermo sensitive resins or additives.
- Do not use Ultra Purge outside its working temperature range.


 ULTRA
 PURGE

Ultra Purge PC

Ready-to-use chemical purging compound

Working temp range

from 220°C / 428°F

to 340°C / 644°F

When switching from any resin to PC

Please read carefully TDS-SDS before using Ultra Purge

Extrusion – SHEET

This document is a general description on how to use Ultra Purge. Request your customized instructions by contacting your nearest sales office or local distributor.

- Before starting the purging process, decrease the temps in the head middle area (-20°C/-40°F) and increase the temps on the sides (+20°C/+40°F).
- **Empty the barrel before start purging.**
- Add Ultra Purge (approximately 1.5 times the extruder barrel capacity).
- Extrude at low speed until Ultra Purge being ejected from the machine.
- If extruder pressure builds up after loading Ultra Purge, remove the screen pack.
- Add the next production resin directly after Ultra Purge.

(In case of material change with different working temperature, set the temperatures to the next production resin)

- Extrude the next production resin at higher speed to flush out all remnants of Ultra Purge. If possible, replace the screen pack.
- If contamination persists repeat steps.

Special notes:

TDS-Ultra_Purge_PC_rev1_ENG

- Do not load Ultra Purge through heated feeding line - Ultra Purge starts to melt at 80 C / 176 F.
- Do not allow a longer soak time than what suggested.
- Do not use more than recommended quantities of Ultra Purge per cleaning.
- Do not increase temperatures if dealing with thermo sensitive resins or additives.
- Do not use Ultra Purge outside its working temperature range.